




צעדים להתקנת המדייח.

1. יש להכין ברז כניסה מים עם הברגה " 3/4 אינץ ופתח ניקוז למים.
2. טכני החברת יוציא את המדייח מאריזתו, יחבר אותו למים ולניקוז ויכניס את המדייח למקוםו.


הלקוח או הנגר

- א. ירכיבו את דלת העץ על המדייח.
- ב. ירימו את המדייח בעזרת הרגלית האחורי (A) ובעזרת שני הרגליות הקדמיות (5) עד אשר יגיע לגובה משטח העבודה, - שיימו לב, גובה הרגליות המקסימלי הינו 50 מ"מ.
- ג. יש לבדוק שהמדייח מפולס (בעזרת פלס מים) קדימה ואחורה, ולצדדים.
- ד. יש לחתק את המדייח לארון המטבח עם בורג (6).

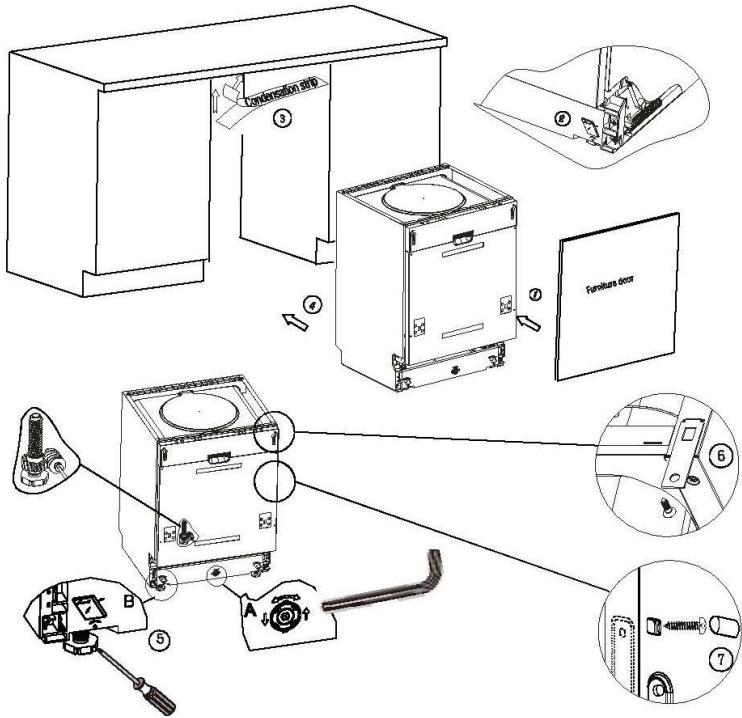


יש לבדוק איזון בעזרת פלס מים בין חזית

יש לבדוק איזון בעזרת פלס מים בין ימין

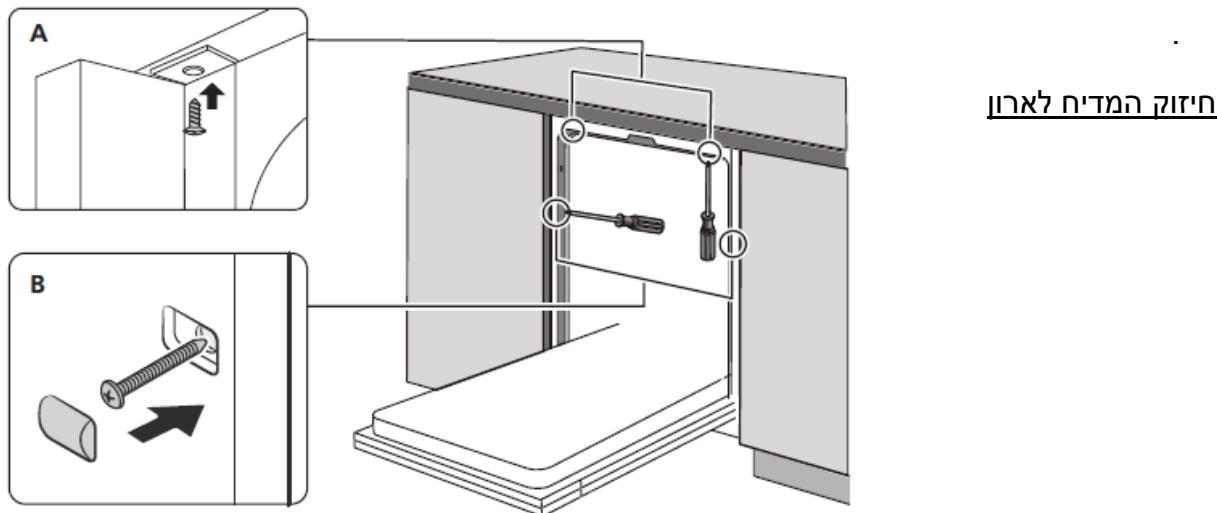


חיבור צינור הניקוז

שימוש לב שצינור הניקוז לא מחובר בגובה של לא יותר מ-100 ס"מ בмедиיה והוא מתחבר לסiphon של הכיור. בмедиיה ומחברים אותו לפתח ניקוז בריצפה, קוטרו צריך להיות לפחות 40 מ"מ.

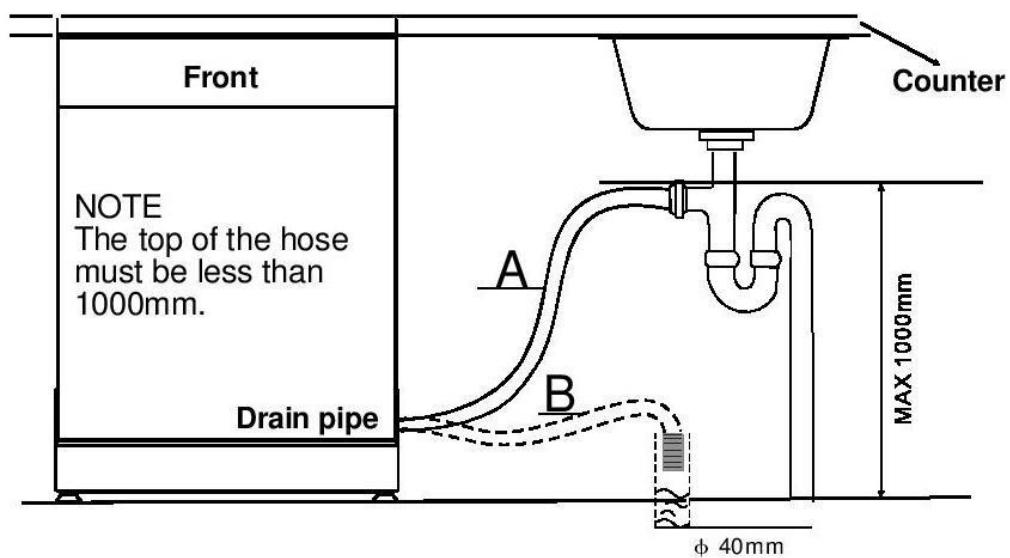

ניקוי הפלטרים:

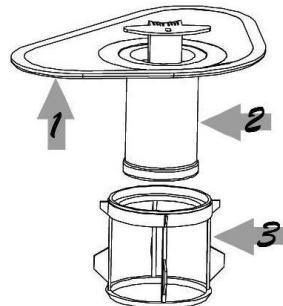


חובה לנוקות את הפלטרים לאחר ההדחה.
הפלטרים נמצאים בתחתית תא המ Dich מתחת לסל התחתון.

1. פילטר עיקרי.
2. פילטר גס.
3. פילטר עדין.

מטרת הפלטרים הינה למנוע משארית המזון להכנס למערכת המים.


ניקוי זרועות המטרה

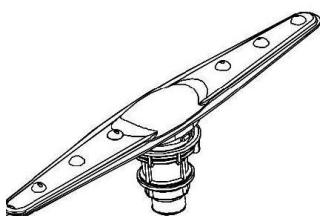

יש לנוקות את זרועות המ Dich אחת לתקופה. ניתן לפרק את הזרוע ממקומה ולשטוּף עם מים חמים.
יש לוודא שכל הפתחים פתוחים, אחרת הכלים לא יצאו נקיים.

מידות הפתח שיש להכין למ Dich.

חובה לפתוח פתח ארון בין יחידת המ Dich ליחידת ה כיר על מנת להעביר את צינור המים וצינור הניקוז. כמו כן יש לאפשר להעביר את כבל החשמל לשקע המיועד למ Dich.

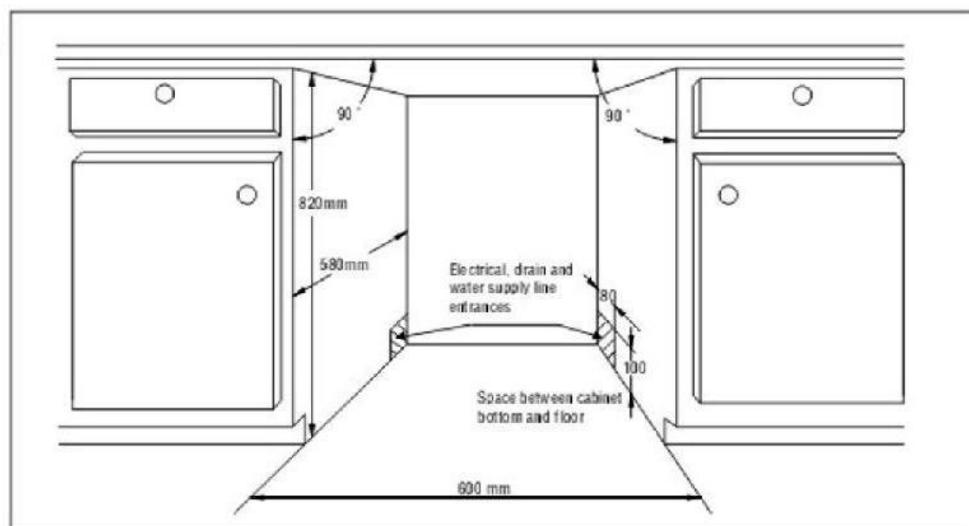


יש לדאוג למינימום רווח של 50 מ"מ בין הדלת לבין הארון, כאשר המ Dich בפנים.



סמן תאורה על הריצפה לשימון מצב פעולה וסיום


כאשר מפעילים את המדייח, תדלק נורה שתאיר על הריצפה בתחתית המדייח לאורך תוכנית הבדיקה. לבסוף תהברבב למשך חמיש דקות ותכבה בסיום הבדיקה.

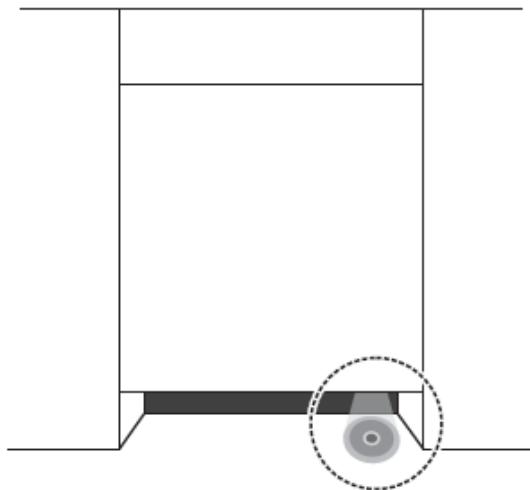



נוזל הברקה

יש למלא נוזל הברקה מפעם לפעם. אין להמתין לנורת הביקורת של חוזר נוזל הברקה שתתדלך. יש להשתדל למלא לפני שימושו לארבע מהכמות. את הכמות ניתן להאריך לפני העינית שנמצאת ליד פקק המילוי.

● Full ● 3/4 full ● 1/2 full ● 1/4 full ○ Empty
מלא ¾ כמות ½ כמות ¼ כמות ריק

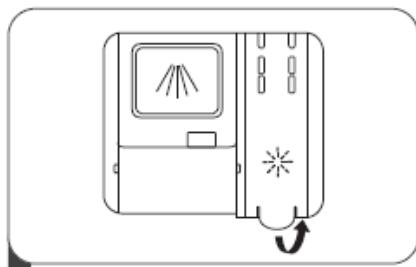

1 Remove the rinse reservoir cap by lifting up the handle .

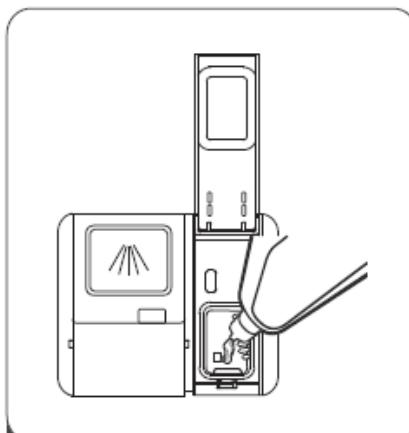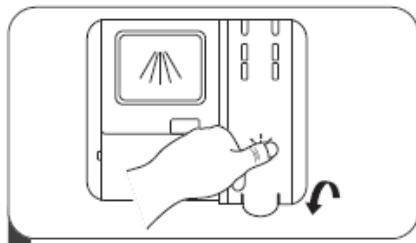

מילוי נוזל הברקה

3 Close the cap after all.

כיוון נוזל הברקה

לצורך שינוי קביעת נוזל הברקה פועלו כלהלן :

1. פיתחו את הדלת ולחצו כפתור הפעלה הראשי (1).
2. תוך 60 שניות, לחזו על כפתור בחירת התוכניות (3) למשך 5 שניות רצופות. לאחר מכן לחזו על כפתור הפעלה העתידית (5)
3. לחזו שוב על בחירת התוכניות (3) כדי לשנות את כיוון המרכך. השינוי הוא בדרך זו: **D5>D3>D4>D1** כאשר **D5** מוציא מקסימום חומר.

: הנורות הבאות יבהבו בכל אחת מהרמות:

  = D3 \

 = D2 \  = D1

Eco.  = D5

Eco.  = D4


4. לחזו על כפתור הפעלה\כיבוי הראשי. שימו לב: המדייח מגיע מהפעל מכון למאכזב : **D3**

הפעלת המדיח ובחירה תוכנית הדחה

1. הכניסו את הכלים למדיח.
2. הכניסו אבקת ניקוי או טבלית ניקוי.
3. ודאו שישמלח ונוzel הברקה במדיח.
4. פיתחו את דלת המדיח ולחצו על כפתור הפעלה \ כיבוי ראשי (1) נורת הביקורת תדלק.
5. בחרו את תוכנית הדחה בעזרת בורר התוכניות (3) הנורא ליד הסימן של התוכנית הנבחרת תדלק.
6. סיגרו את דלת המדיח להתחלה הדחה.

תוכנית	סוג הצלולר	תהליך הדחה	כמות האבקה	זמן הדחה
אינטרנסיבית 	לכלור רב ויבש	שטייפה מקדמית 50°C הדחה 65°C שטייפה שטייפה שטייפה 70°C יבוש	30gr	170 דקות
חסכונית 	לכלור קל ולח	שטייפה מקדמית שטייפה 45°C הדחה 65°C יבוש	30gr	190 דקות
90 דקות 	כלים מילוכלים קלות שאינן זקוקים לייבוש מושלים	שטייפה מקדמית 65°C הדחה 65°C הדחה 65°C יבוש	35gr	90 דקות
מהירה 	הדחה מהירה כלים מילוכלים קלות	שטייפה 45°C הדחה 50°C הדחה 55°C	25gr	30 דקות

המים בישראל הינם מים קשים וקשהותם משתנה מאזור לאזור. חובה להשתמש במלח המירוע למדייח כלים בלבד. לפני הפעלה ראשונית מלאו את המיכל כדי 3/2 מים. ואח"כ הוסיפו כ- 2 ק"ג מלח. סגרו את מכסה המיכל היטב. בהמשך הוסיפו מלח מפעם לפעם, אולם אל תמתינו שהנורה תדלק. אם נורת הביקורת לחסור מלח תדלק הוסיפו מיד. אולם אסור להמתין עד שתדלק.

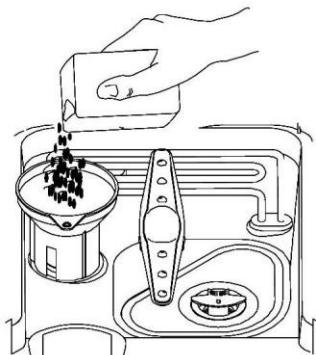

זהירות : יש להוסיף את המלח ממש לפני הדרשה כדי שמי הדרשה ישטפו את שרירות המלח. שרירות מלח על הנירוסטה לאורך זמן יכולות לגרום לנוז בלתי הפיך לנירוסטה ולמדיה.


כיוון מרכיב המים

את כיוון המים יש לקבוע לפי קשיות המים במקום מגוריכם. השתמשו בטבלה למטה לקביעת הכוון. לצורך שינוי קביעת מרכיב המים פועלו כלהלן :

1. פיתחו את הדלת ולחצו כפתור הפעלה ראשי (1).
2. תוך 60 שניות, לחזו על כפתור בחירת התוכניות (3) למשך 5 שניות רצופות. נורת הביקורת (2) יידלקו.

3. לחזו שוב על בחירת התוכניות (3) כדי לשנות את כיוון המרכיב.

השני הוא בדרך זו : **H1>H2>H3>H4>H5>H6** הנורות הבאות יבהבו בכל אחת מהרמות:

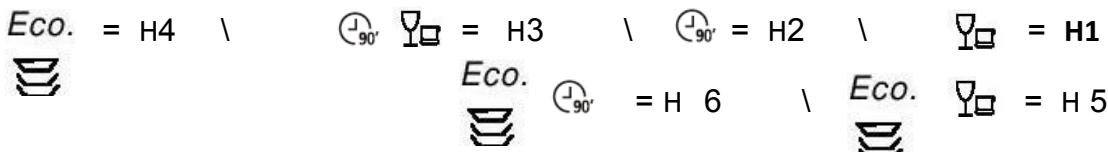

4. לחזו על כפתור הפעלה\כיבוי ראשי. שימו לב: המדייח מגיע מהמפעל מכון במצב : H4.

WATER HARDNESS				Selector Position	Salt consumption (gram/cycle)	Autonomy (cycles/1kgs)
°dH	°fH	°Clarke	mmol/l			
0~5	0~9	0~6	0~0.94	H1--Rapid Light bright	0	/
6-11	10-20	7-14	1.0-2.0	H2--1Hour Light bright	20	60
12-17	21-30	15-21	2.1-3.0	H3--1Hour, Rapid Light bright	30	50
18-22	31-40	22-28	3.1-4.0	H4--Glass Light bright	40	40
23-34	41-60	29-42	4.1-6.0	H5--Glass, Rapid Light bright	50	30
35-55	61-98	43-69	6.1-9.8	H6--Glass, 1Hour Light bright	60	20

פנل הפעלה



2. נורת חיווי לחוסר מלח ונוזל הברקה.
1. כפטור הפעלה \ כבוי ראשי.
4. כפטור בחירת חצי כמות – לחיסכון
3. כפטור בורר תוכניות.
- 5 כפטור בחירת הפעלה עתידית. נורת חיווי לזמן ההשהייה בהדחה עתידית. במים וחשמל

מבט על המדייח



1. סל כלים עליון.
2. צינור מים פנימי.
3. סל כלים תחתון.
4. מיכל مليוי מליח.
5. מיכל مليוי אבקת ניקוי ונוזל הברקה.
6. מדף לכוסות.
7. זרוע התזעה.
8. פילטר.
9. פתח חיבור מים.
10. צינור ניקוז.
11. רגליית הגבהה.

הכנסת כלים למדיח

העיצוב של הסל העליון והסל התחתון מאפשרים להכנס מספר סוגים וגדלים של כלים, כל חרס, כל מטבח וכו' לשני הסלים. מצב זה מקל על מלאי הכלים במדיח, ומאפשר גמישות במלאי המדייח בכלים

תחילת הרחק את שאריות האוכל מהכלים.
כלים אשר ניתן להכיל בהם נזולים יש להניח הפור, לפני מטה.
סדר את הכלים באלכסון כדי שהמים ירדו מהם ולא ישארו עליהם.
הניח כלים גבוהים, דקים, ובעלי קיבולת לנזולים בחלוקת האחורי של הסל.
הכלים אמורים להיות מונחים על הסל ולא נשענים זה על זה.
esco"ם יש להניח במתיקן המיעוד לסכו"ם. כאשר ידית האחיזה לפני מטה.
esco"ם ומצקנות הארוכים מדי יש להניח לאורך הסל בשכיבת.
על כל פלסטיק קלים מאוד יש להשען כלי כבד כדי למנוע מזרם המים להפור או להפיל
אותם מתוכה הסל.

חשוב ביותר :
לפני סגירת דלת המדייח והפעלת המדייח, יש לוודא שזרועות המטרת המים מסתובבות
לאה הפרעה של כלי כלשהו.

כלים לא מתאימים למדיח כלים

כלים מעץ או עצם – כולל כלים עם ידיות מחומר זה – אינם מתאימים למדיח. כמו כן כלים
עם חלקים מודבקים. חלקים מפלסטיק, נחושת, פח או כלים אשר אינם עמידים בחום. כלים
בציפוי גלאזורה, עיטורים סיניים, אלומיניום או סוף נוטים לדוחות ולאבד מצבען. כמו כן זכוכית
קריסטל יכולה לאטומה אחרי הרבה הדוחות.
המלצה – השתדלו לקנות כלים אשר מסומנים על ידי הייצן כעמידים במדיח כלים.

מה לא להכנס למדיח הכלים :
כלים או סכום המלוכלים עם אפר טבק, שעווה וצבע.

הוצאת הכלים מהמדיח

בסיום תחילת הדוחה פתח את הדלת במקצת והשאר אותה במצב זה למספר דקות.
יש לרוקן את הסל התחתון ראשון ולאחר מכן את הסל העליון, זה מונע טפטוף מים מכל
שתחתיתו כעורה אשר מונח בסל העליון על כלים יבשים בסל התחתון.

אחזקה כללית

בדוק את הפילטר הגס והפילטר העדי, אם יש בתוכם שאריות מזון. שטוף אותם תחת מים
זרמיים. כאשר מוחזרים את הפלטרים למקום יש לבדוק שהפילטר העליון מפלסטיק יושב
במקומו וננען (קליק) בתוך הפילטר הגס, וההפילטר הגס מונח במקומו.
יש לבדוק שהזרוע התחתונה המתיזה מים מונחת במקומה וננענת בקליק.

הרכבה

- ❖ המדייח חייב להיות מאוזן (ימין מול שמאל, חזית מול עורף) על ידי הרגליות המתכוונות.
- ❖ חיבור המדייח ייעשה ע"י טכני מוסמך של החברה בלבד אחרת האחריות למדייח בטלה.

צינור הניקוז :

- ❖ קפל את צינור הניקוז בקשת.
- ❖ קצה צינור הניקוז צריך להיכנס למתקן הניקוז, או "הסיפון" של הכלור.
- ❖ קוטר צינור הניקוז מהרצפה צריך להיות לפחות 30 מ"מ, אך שיהיה רוח יציאת אויר בחיבור שבין צינור הניקוז של המדייח לבין צינור הניקוז היוצא מהרצפה.

חיבור מים :

- ❖ קוטר צינור המים הנכנסים למדייח מסת"ים ב – "4/3 אינץ – נקבה, لكن הברז צריך להסת"ים בהתאם זכירת גודל הצינור.
- ❖ לחץ המים צריך להיות בין 0.3 ל – 10 BAR, ולפחות זרימה של 10 ליטר מים בדקה.
- ❖ המדייח חייב להיות מחובר למים קרים בלבד.
- ❖ המדייח מגיע עם צינור כניסה PVC יכול להיות מחובר למים קרים בלבד, וזאת לפי המלצת הייצור. החיבור למים קרים מבטיח את יbosת הכלים באופן הטוב ביותר.
- ❖ אם מחברים בכלל זאת את המדייח למקור מים חמים – אסור לטמפרטורת המים להיות מעל 50 מעלות. במקרה זה יש צורך בהחלפת הצינור ה- PVC לצינור גומי. צינור הגומי יחוור ע"י טכני מוסמך של החברה בלבד – וזאת תמורה תשולם.

חיבור חשמל :

- ❖ יש לחבר את המדייח למקור מתח AC v 240 - 230 עם הארקה תקנית בלבד.
- ❖ הנטייר חייב להיות לפחות A 16.

זהירות ובטיחות

קרה בעין את הוראות ההרכבה וההפעלה לפני השימוש הראשוני במדיח. שמוור חוברת הוראות שימוש זו במקומות בטוחים. אם וכאשר תמכור את המדיית, אנהה עבר גם חוברת זו, יחד עם המדיית. אחריות היצwan והיבואן בטלים אם השימוש במדיח אינו לפי הוראות הפעלה אלה.

- הרחק בזהירות את האזינה מהmdiית.
- בmdiית והmdiית נזוק אל תשתמשו בו - קיראו לטכני השירות.
- mdiית מיועד לשימוש ביתי בלבד ולפי הוראות אלה בלבד.
- הכנס את mdiית למקומו בהתאם להוראות ההרכבה. שקע החשמל חייב להיות מותאם, לפחות, לצורכי המקסימלית הרשומה על mdiית.
- הארקה חשמלית של mdiית מובטחת רק אם השקע וכל מערכת החשמל של הבית מחוברים להארקה כהלה.
- אל תשתמש בכבל מאריך (לחשמל).
- תיקון וטיפול בmdiית ייעשו על ידי טכני מוסמך של החברה בלבד.
- לפנוי כל טיפול או תיקון mdiית יש לנתקו מהחשמל ע"י הוצאת התקע מהשיקע, או ע"י ניתוק הנתוק בלוח החשמל. כמו כן יש לסגור את ברז המים.
- שמוור על חומרי ניקוי הרחק מהישג ידם של ילדים. אל תניח לילדים לפתח ולסגור את mdiית.
- המים בmdiית אינם ראויים לשתייה.
- אל תכנס לmdiית שום סוג של חומר ממיס מאחר והוא עלול לגרום לפיצוץ.
- משטח השיש או הארון מעל mdiית חייבים להיות ישרים ומחזקים יותר מאשר הארון, כדי לשמר את mdiית במצב יציב. כדי לשמר על יציבות mdiית יש להגביה עד 13 - למשטח העבודה.
- אל תשב ואל תעמוד על דלת mdiית כשהיא פתוחה. mdiית עלול ליפול ולהינזק.
- אל תרשה לילדים להפעיל את mdiית או לשחק בו.
- אל תכנס כל עץ או כלים אחרים בגימור מיוחד לmdiית ומלאו שטח הכלים עלולים להינזק.
- אל תכנס אבקת ניקוי או נוזל הברקה לתא המלח מאחר והדבר יגרום נזק למערכת ריכוך המים. במקרה כזה האחריות על mdiית בטלה.

זהירות: אין לנוקות את פnal mdiית עם חומרי ניקוי חריפים – יש לשמש רק עם מטלית להחה ומים נקיים.

חשוב ביותר !

לפנוי הזמנת טכני להרכבה יש לוודא שיש בבית:

1. ברז מים עם הברגה 4/3 איןץ.
2. נקודות חשמל לmdiית. (לא מאריך ולא מפצל)
3. נקודות ניקוז למים.
4. מלח לmdiית כלים.
5. נוזל הברקה לmdiית כלים.
6. אבקת הדחה לmdiית כלים.

זהירות: רצוי להוסף מלח לmdiית ממש לפנוי הבדיקה כדי ששאריות המלח ישטפו בהדחה. בmdiית ומושגים מלח לאחר הבדיקה **חבה** לשטוף את תחתית mdiית משאריות מלח. שאריות מלח שעמדות זמן רב יכולות לגרום נזק בלתי הפיך לנירוסטה בתחתית mdiית.

**אם כתמוך הליונה ר'זוק, כי גהאנץ מסכמת,
המחמתו מיצאה אק וק צ"י סכרי ניסנק
נוזט היגזאר**



בס"ד

קופר יבוא 1992 בע"מ

הוראות שימוש מדיח כלים

D 7308

מכשיר זה אינו מיועד לשימוש על ידי אנשיים (כולל ילדים) עם יכולות פיזיות, חושיות או יכולות מופחתות, או עם העדר ניסיון וידע. אלא אם הם תחת פיקוח או שקיבלו הנחיה לשימוש במכשיר על ידי האדם האחראי לבטיחותם.
ילדים צריכים להיות תחת השגחה, כדי להבטיח, שהם לא משחקים עם המכשיר.

A

A

B

B

C


C

技术要求:

1. 该手册印刷颜色均为黑色 :PANTONE BLACK C
2. 纸张规格为A5
3. 如果供应商的排版需要加空白页, 请加51P前

1

1

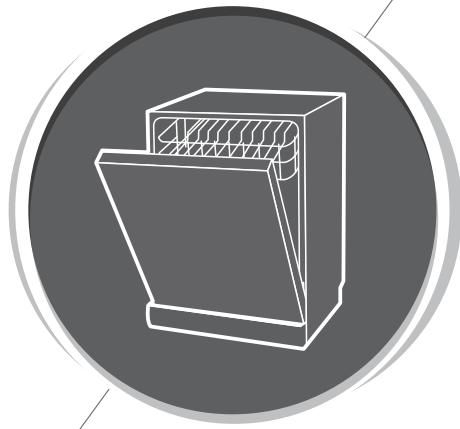

Dishwasher Instruction Manual

PART I : Generic Version

Please read this manual carefully before using the dishwasher.
Keep this manual for future reference.

|| CONTENTS

01	3 SAFETY INFORMATION
02	8 PRODUCT OVERVIEW
03	9 USING YOUR DISHWASHER
	9 Loading The Salt Into The Softener
	11 Basket Used Tips
04	13 MAINTENANCE AND CLEANING
	13 External Care
	13 Internal Care
	16 Caring For The Dishwasher
05	17 INSTALLATION INSTRUCTION
	17 About Power Connection
	18 Water Supply And Drain
	19 Connection Of Drain Hoses
	20 Position The Appliance
	20 Free Standing Installation
	21 Built-In Installation(for the integrated model)
06	26 TROUBLESHOOTING TIPS
07	30 LOADING THE BASKETS ACCORDING TO EN50242

NOTE:

- Reviewing the section on troubleshooting Tips will help you solve some common problems by yourself.
- If you cannot solve the problems by yourself, please ask for help from a professional technician.
- The manufacturer, following a policy of constant development and updating of the product, may make modifications without giving prior notice.
- If lost or out-of-date, you can receive a new user manual from the manufacturer or responsible vendor.

|| SAFETY INFORMATION

⚠ WARNING

When using your dishwasher, follow the precautions listed below:

- Installation and repair can only be carried out by a qualified technician
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision. (For EN60335-1)
This appliance is not intended for use by persons (including children) with reduced physical, sensory or

mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. (For IEC60335-1)

- Packaging material could be dangerous for children!
- This appliance is for indoor household use only.
To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- Please unplug before cleaning and performing maintenance on the appliance.
- Use a soft cloth moistened with mild soap, and then use a dry cloth to wipe it again.



Earthing Instructions

- This appliance must be earthed. In the event of a malfunction or breakdown, earthing will reduce the risk of an electric shock by providing a path of least resistance of electric current. This appliance is equipped with an earthing conductor plug.
- The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local codes and ordinances.
- Improper connection of the equipment-earthing conductor can result in the risk of an electric shock.
- Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded.

- Do not modify the plug provided with the appliance; If it does not fit the outlet.
- Have a proper outlet installed by a qualified electrician.
- Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
- Do not operate your dishwasher unless all enclosure panels are properly in place.
- Open the door very carefully if the dishwasher is operating, there is a risk of water squirting out.
- Do not place any heavy objects on or stand on the door when it is open. The appliance could tip forward.
- When loading items to be washed:
 - 1) Locate sharp items so that they are not likely to damage the door seal;
 - 2) Warning: Knives and other utensils with sharp points must be loaded in the basket with their points facing down or placed in a horizontal position.
- Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the dishwasher when the door is open.
- Check that the detergent powder is empty after completion of the wash cycle.

- Do not wash plastic items unless they are marked "dishwasher safe" or the equivalent.
- For unmarked plastic items not so marked, check the manufacturer's recommendations.
- Use only detergent and rinse agents recommended for use in an automatic dishwasher.
- Never use soap, laundry detergent, or hand washing detergent in your dishwasher.
- The door should not be left open, since this could increase the risk of tripping.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

- During installation, the power supply must not be excessively or dangerously bent or flattened.
- Do not tamper with controls.
- The appliance needs to be connected to the main water valve using new hose sets. Old sets should not be reused.
- To save energy, in stand by mode, the appliance will switch off automatically while there is no any operation in 30 minutes .
- The maximum number of place settings to be washed is 12.
- The maximum permissible inlet water pressure is 1MPa.
- The minimum permissible inlet water pressure is 0.04MPa.

Disposal



- For disposing of package and the appliance please go to a recycling center. Therefore cut off the power supply cable and make the door closing device unusable.
- Cardboard packaging is manufactured from recycled paper and should be disposed in the waste paper collection for recycling.
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- For more detailed information about recycling of this product, please contact your local city office and your household waste disposal service.
- **DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.**




PRODUCT OVERVIEW

❶ IMPORTANT:


To get the best performance from your dishwasher, read all operating instructions before using it for the first time.

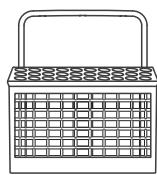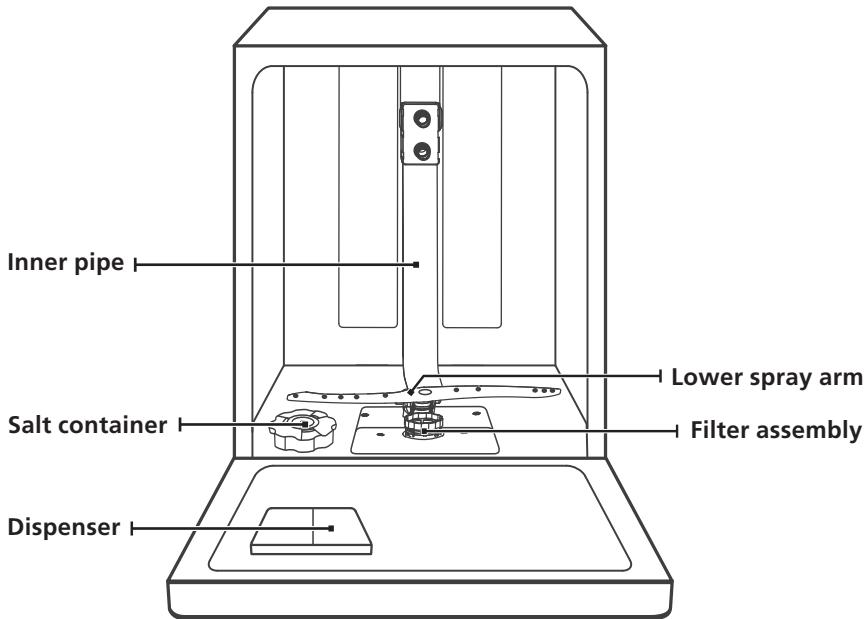

Cutlery basket

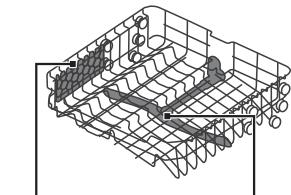

Cup rack upper spray arm

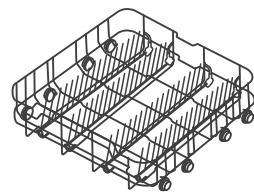


Lower basket

💡 NOTE:

Pictures are only for reference, different models may be different. Please prevail in kind.

|| USING YOUR DISHWASHER

Before using your dishwasher :

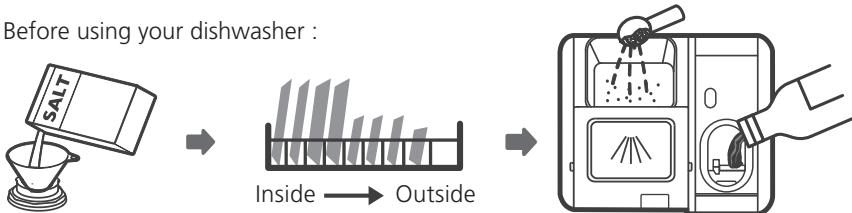

1. Set the water softener
2. Loading the salt Into the softener
3. Loading the basket
4. Fill the dispenser



Please check the section 1 "Water Softener" of PART II : Special Version,
If you need to set the water softener .

• Loading The Salt Into The Softener

💡 NOTE:

If your model does not have any water softener, you may skip this section.
Always use salt intended for dishwasher use.
The salt container is located beneath the lower basket and should be filled as explained in the following:

⚠ WARNING


- **Only use salt specifically designed for dishwashers use!**

Every other type of salt not specifically designed for dishwasher use, especially table salt, will damage the water softener. In case of damages caused by the use of unsuitable salt the manufacturer does not give any warranty nor is liable for any damages caused.

- **Only fill with salt before running a cycle.**

This will prevent any grains of salt or salty water, which may have been spilled, remaining on the bottom of the machine for any period of time, which may cause corrosion.

Please follow the steps below for adding dishwasher salt:

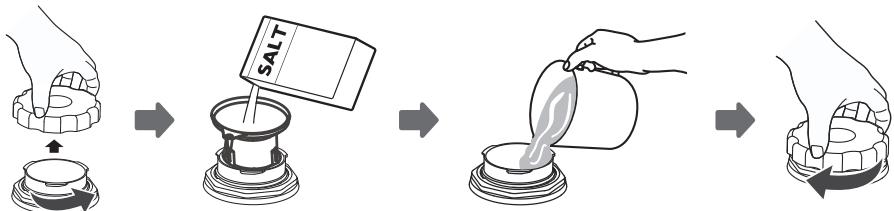

1. Remove the lower basket and unscrew the reservoir cap.
2. Place the end of the funnel (if supplied) into the hole and pour in about 1.5kg of dishwasher salt.
3. Fill the salt container to its maximum limit with water, It is normal for a small amount of water to come out of the salt container.
4. After filling the container, screw back the cap tightly.
5. The salt warning light will stop being after the salt container has been filled with salt.
6. Immediately after filling the salt into the salt container, a washing program should be started (We suggest to use a short program). Otherwise the filter system, pump or other important parts of the machine may be damaged by salty water. This is out of warranty.

NOTE:

- The salt container must only be refilled when the salt warning light () in the control panel comes on. Depending on how well the salt dissolves, the salt warning light may still be on even though the salt container is filled.
If there is no salt warning light in the control panel (for some Models), you can estimate when to fill the salt into the softener by the cycles that the dishwasher has run.
- If salt has spilled, run a soak or quick program to remove it.


• Basket Used Tips

Adjusting the upper basket


Type 1:

The height of the upper basket can be easily adjusted to accommodate taller dishes in either the upper or lower basket.


To adjust the height of the upper rack, follow these steps:

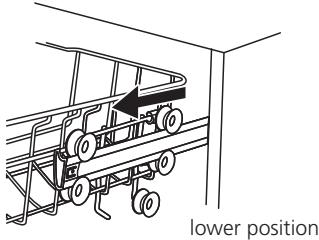


- 1 Pull out the upper basket.

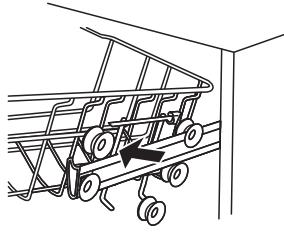

- 2 Remove the upper basket.


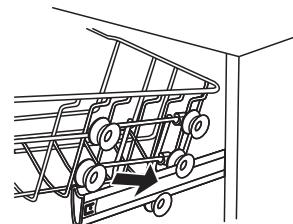


- 3 Re-attach the upper basket to upper or lower rollers.

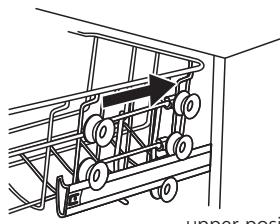

- 4 Push in the upper basket.

Type 2:

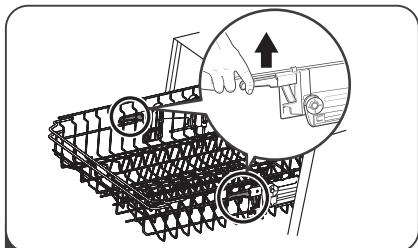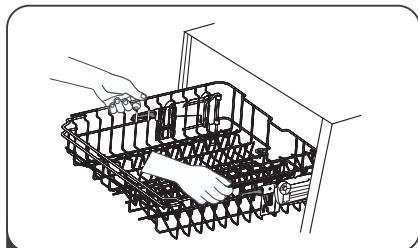


1 To raise the upper basket, just lift the upper basket at the center of each side until the basket locks into place in the upper position. It is not necessary to lift the adjuster handle.

2 To lower the upper basket, lift the adjust handles on each side to release the basket and lower it to the lower position.



Folding back the cup shelves

To make room for taller items in the upper basket, raise the cup rack upwards. You can then lean the tall glasses against it. You can also remove it when it is not required for use.

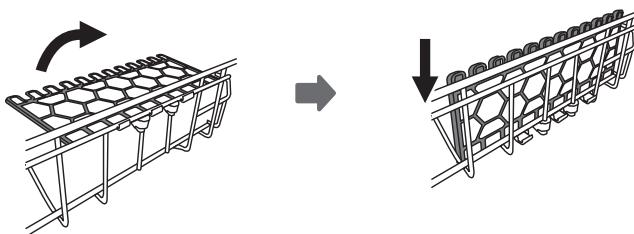

Folding back the rack shelves

The spikes of the lower basket are used for holding plates and a platter. They can be lowered to make more room for large items.

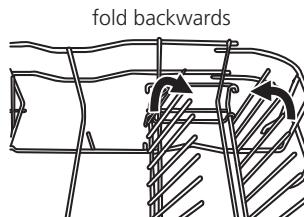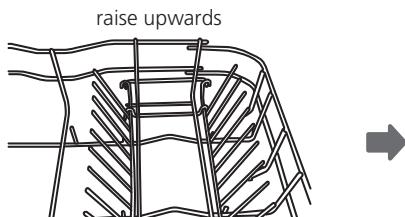

|| MAINTENANCE AND CLEANING

• External Care

The door and the door seal

Clean the door seals regularly with a soft damp cloth to remove food deposits.

When the dishwasher is being loaded, food and drink residues may drip onto the sides of the dishwasher door. These surfaces are outside the wash cabinet and are not accessed by water from the spray arms. Any deposits should be wiped off before the door is closed.

The control panel

If cleaning is required, the control panel should be wiped with a soft damp cloth only.

⚠ WARNING

- To avoid penetration of water into the door lock and electrical components, do not use a spray cleaner of any kind.
- Never use abrasive cleaners or scouring pads on the outer surfaces because they may scratch the finish. Some paper towels may also scratch or leave marks on the surface.


• Internal Care

Filtering system


The filtering system in the base of the wash cabinet retains coarse debris from the washing cycle. The collected coarse debris may cause the filters to clog. Check the condition of the filters regularly and clean them if necessary under running water. Follow the steps below to clean the filters in the wash cabinet.

💡 NOTE:

Pictures are only for reference, different models of the filtering system and spray arms may be different.

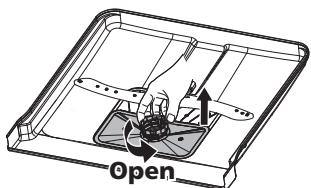


1 Hold the coarse filter and rotate it anticlockwise to unlock the filter. Lift the filter upwards and out of the dishwasher.

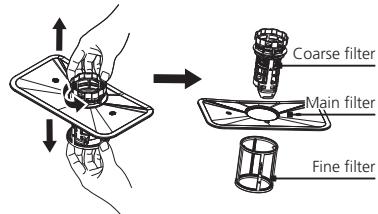

2 The fine filter can be pulled off the bottom of the filter assembly. The coarse filter can be detached from the main filter by gently squeezing the tabs at the top and pulling it away.



3 Larger food remnants can be cleaned by rinsing the filter under running water. For a more thorough clean, use a soft cleaning brush.

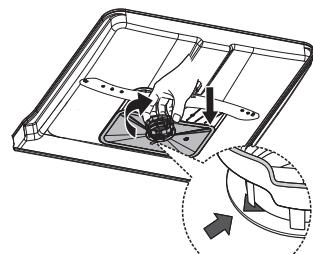

4 Reassemble the filters in the reverse order of the disassembly, replace the filter insert, and rotate clockwise to the close arrow.


⚠ WARNING

- Do not over tighten the filters. Put the filters back in sequence securely, otherwise coarse debris could get into the system and cause a blockage.
- Never use the dishwasher without filters in place. Improper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils.


Spray arms

It is necessary to clean the spray arms regularly for hard water chemicals will clog the spray arm jets and bearings.


To clean the spray arms, follow the instructions below:

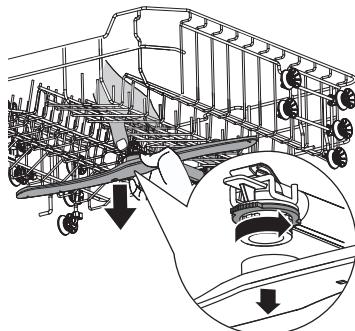

- 1 To remove the upper spray arm, hold the nut in the center still and rotate the spray arm counterclockwise to remove it.

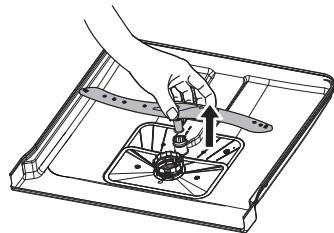

- 2 To remove the lower spray arm, pull out the spray arm upward.

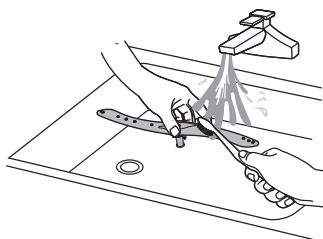

- 3 Wash the arms in soapy and warm water and use a soft brush to clean the jets. Replace them after rinsing them thoroughly.

Caring For The Dishwasher

Frost precaution

Please take frost protection measures on the dishwasher in winter. Every time after washing cycles, please operate as follows:

1. Cut off the electrical power to the dishwasher at the supply source.
2. Turn off the water supply and disconnect the water inlet pipe from the water valve.
3. Drain the water from the inlet pipe and water valve. (Use a pan to gather the water)
4. Reconnect the water inlet pipe to the water valve.
5. Remove the filter at the bottom of the tub and use a sponge to soak up water in the sump.

After every wash

After every wash, turn off the water supply to the appliance and leave the door slightly open so that moisture and odors are not trapped inside.

Remove the plug

Before cleaning or performing maintenance, always remove the plug from the socket.

No solvents or abrasive cleaning

To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Only use a cloth with warm soapy water.

To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little vinegar, or a cleaning product made specifically for dishwashers.

When not in use for a longtime

It is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly open. This will help the door seals to last longer and prevent odors from forming within the appliance.

Moving the appliance

If the appliance must be moved, try to keep it in the vertical position. If absolutely necessary, it can be positioned on its back.

Seals

One of the factors that cause odors to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.

|| INSTALLATION INSTRUCTION

⚠ WARNING



Electrical Shock Hazard

Disconnect electrical power before installing dishwasher.

Failure to do so could result in death or electrical shock.

⚠ Attention

The installation of the pipes and electrical equipments should be done by professionals.

• About Power Connection

⚠ WARNING

For personal safety:

- Do not use an extension cord or an adapter plug with this appliance.
- Do not, under any circumstances, cut or remove the earthing connection from the power cord.

Electrical requirements

Please look at the rating label to know the rating voltage and connect the dishwasher to the appropriate power supply. Use the required fuse 10A/13A/16A, time delay fuse or circuit breaker recommended and provide separate circuit serving only this appliance.

Electrical connection

Ensure the voltage and frequency of the power being corresponds to those on the rating plate. Only insert the plug into an electrical socket which is earthed properly. If the electrical socket to which the appliance must be connected is not appropriate for the plug, replace the socket, rather than using a adaptors or the like as they could cause overheating and burns.


⚠ Ensure that proper earthing exists before use

Water Supply And Drain

Cold water connection

Connect the cold water supply hose to a threaded 3/4(inch) connector and make sure that it is fastened tightly in place.

If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear. This precaution is needed to avoid the risk of the water inlet to be blocked and damage the appliance.

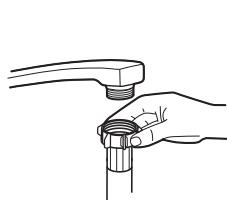

ordinary supply hose



safety supply hose

About the safety supply hose

The safety supply hose consists of the double walls. The hose's system guarantees its intervention by blocking the flow of water in case of the supply hose breaking and when the air space between the supply hose itself and the outer corrugated hose is full of water.

⚠ WARNING

A hose that attaches to a sink spray can burst if it is installed on the same water line as the dishwasher. If your sink has one, it is recommended that the hose be disconnected and the hole plugged.

How to connect the safety supply hose

1. Pull The safety supply hoses completely out from storage compartment located at rear of dishwasher.
2. Tighter the screws of the safety supply hose to the faucet with thread 3/4inch.
3. Turn water fully on before starting the dishwasher.


How to disconnect the safety supply hose

1. Turn off the water.
2. Unscrew the safety supply hose from the faucet.

Connection Of Drain Hoses

Insert the drain hose into a drain pipe with a minimum diameter of 4 cm, or let it run into the sink, making sure to avoid bending or crimping it. The height of drain pipe must be less than 1000mm. The free end of the hose must not be immersed in water to avoid the back flow of it.

⚠ Please securely fix the drain hose in either position A or position B

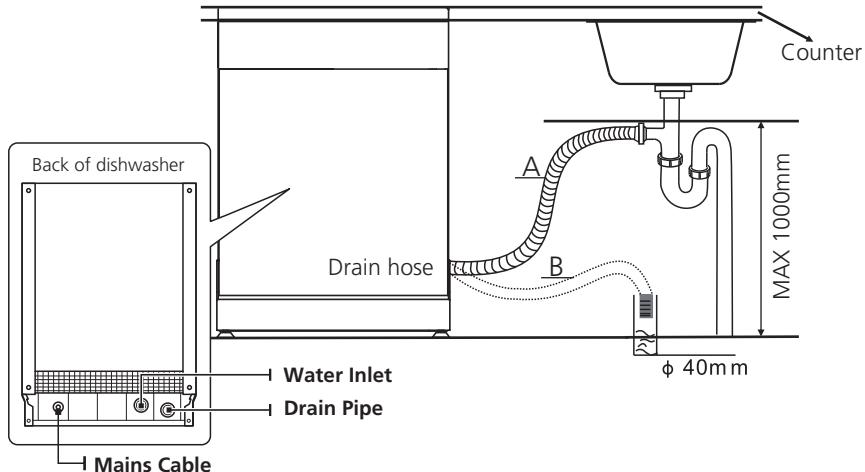

How to drain excess water from hoses

If the sink is 1000 higher from the floor, the excess water in hoses cannot be drained directly into the sink. It will be necessary to drain excess water from hoses into a bowl or suitable container that is held outside and lower than the sink.

Water outlet

Connect the water drain hose. The drain hose must be correctly fitted to avoid water leaks. Ensure that the water drain hose is not kinked or squashed.

Extension hose

If you need a drain hose extension, make sure to use a similar drain hose. It must be no longer than 4 meters; otherwise the cleaning effect of the dishwasher could be reduced.

Syphon connection


The waste connection must be at a height less than 100 cm (maximum) from the bottom of the dish. The water drain hose should be fixed .

Position The Appliance

Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or walls. The dishwasher is equipped with water supply and drain hoses that can be positioned either to the right or the left sides to facilitate proper installation.

Levelling the appliance

Once the appliance is positioned for levelling, the height of the dishwasher may be altered via adjustment of the screwing level of the feet. In any case, the appliance should not be inclined more than 2°.

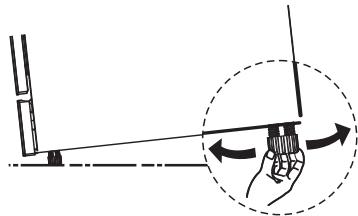

💡 NOTE:


Only apply to the free standing dishwasher.

Free Standing Installation

Fitting between existing carabinets

The height of the dishwasher, 845 mm, has been designed in order to allow the machine to be fitted between existing cabinets of the same height in modern fitted kitchens. The feet can be adjusted so that correct height is reached.


The laminated top of the machine does not require any particular care since it is heatproof, scratchproof and stainproof.

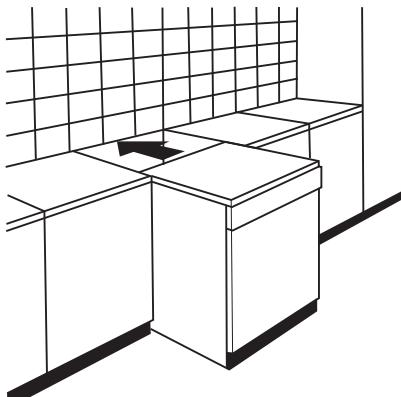

Underneath existing work top

(When fitting beneath a work top)

In most modern fitted kitchens there is only one single work top under which cabinets and electrical appliances are fitted. In this case remove the work top of the dishwasher by unscrewing the screws under the rear edge of the top (a).

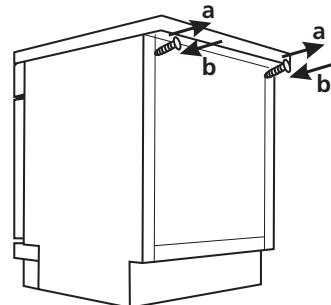

⚠ Attention

After removing the work top, the screws must be screwed again under the rear edge of the top (b).

The height will then be reduced to 815 mm, as scheduled by the International Regulations (ISO) and the dishwasher will fit perfectly under the kitchen working top


• Built-In Installation(for the integrated model)

Step 1. Selecting the best location for the dishwasher


The installation position of dishwasher should be near the existing inlet and drain hoses and power cord.

Illustrations of cabinet dimensions and installation position of the dishwasher.

1. Less than 5 mm between the top of dishwasher and cabinet and the outer door aligned to cabinet.

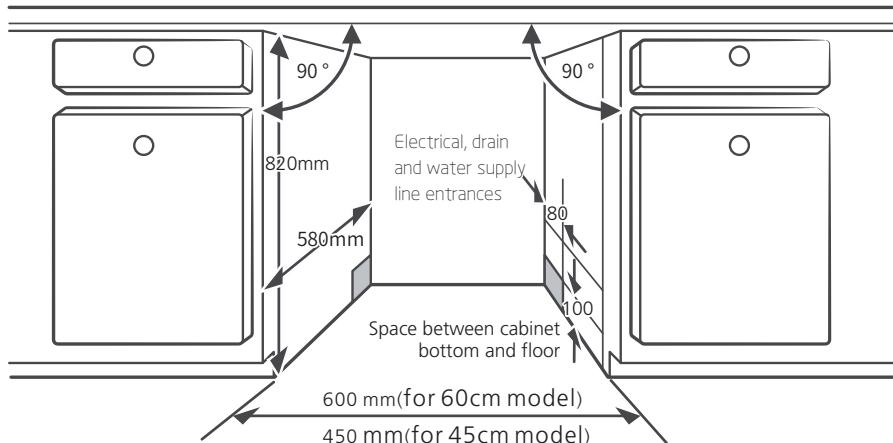

- If dishwasher is installed at the corner of the cabinet, there should be some space when the door is opened.

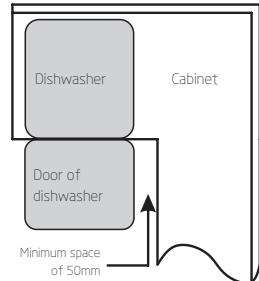

NOTE:

Depending on where your electrical outlet is, you may need to cut a hole in the opposite cabinet side.



Step 2. Aesthetic panel's dimensions and installation



The aesthetic wooden panel could be processed according to the installation drawings.


Semi-integrated model

Magical paster A and magical paster B be disjoined on ,magical paster A on the aesthetic wooden panel and felted magical paster B of the outer door of dishwasher (see figure A). After positioning of the panel , fix the panel onto the outer door by screws and bolts (See figure B).

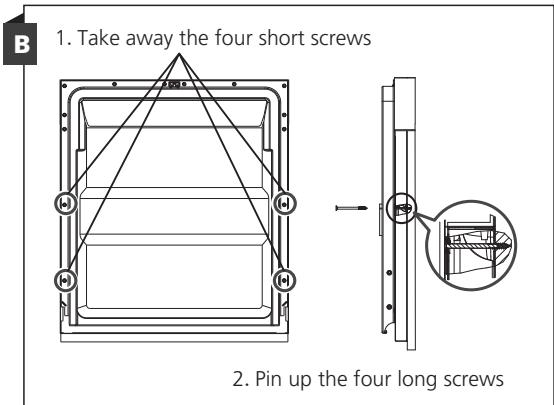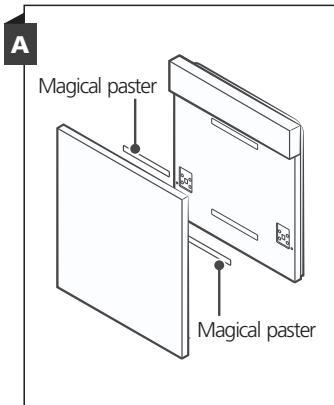


Full-integrated model

Install the hook on the aesthetic wooden panel and put the hook into the slot of the outer door of dishwasher (see figure A). After positioning of the panel , fix the panel onto the outer door by screws and bolts (See figure B).

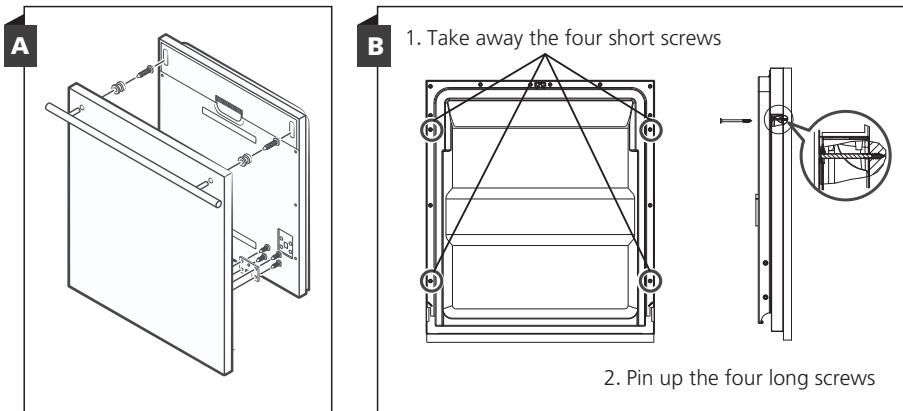

Step 3. Tension adjustment of the door spring

1. The door springs are set at the factory to the proper tension for the outer door. If aesthetic wooden panel are installed, you will have to adjust the door spring tension. Rotate the adjusting screw to drive the adjustor to strain or relax the steel cable.
2. Door spring tension is correct when the door remains horizontal in the fully opened position, yet rises to a close with the slight lift of a finger.

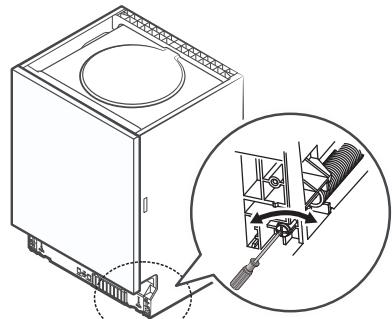


Step 4. Dishwasher installation steps



Please refer to the specified installation steps in the installation drawings.


1. Affix the condensation strip under the work surface of cabinet. Please ensure the condensation strip is flush with edge of work surface. (Step 2)
2. Connect the inlet hose to the cold water supply.
3. Connect the drain hose.
4. Connect the power cord.
5. Place the dishwasher into position. (Step 4)
6. Level the dishwasher. The rear foot can be adjusted from the front of the dishwasher by turning the **Philips screw** in the middle of the base of dishwasher use an **Philips screw**. To adjust the front feet, use a flat screw driver and turn the front feet until the dishwasher is level. (Step 5 to Step 6)
7. Install the furniture door to the outer door of the dishwasher. (Step 7 to Step 10)
8. Adjust the tension of the door springs by using an Allen key turning in a clockwise motion to tighten the left and right door springs. Failure to do this could cause damage to your dishwasher. (Step 11)
9. The dishwasher must be secured in place. There are two ways to do this:
 - A. Normal work surface: Put the installation hook into the slot of the side plane and secure it to the work surface with the wood screws.
 - B. Marble or granite work top: Fix the side with Screw.

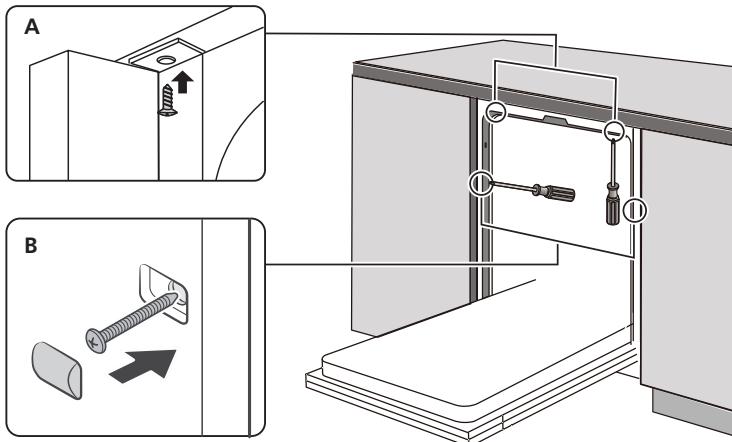

Step 5. Levelling the dishwasher

Dishwasher must be level for proper dish rack operation and wash performance.

1. Place a spirit level on door and rack track inside the tub as shown to check that the dishwasher is level.
2. Level the dishwasher by adjusting the three levelling legs individually.
3. When level the dishwasher, please pay attention not to let the dishwasher tip over.

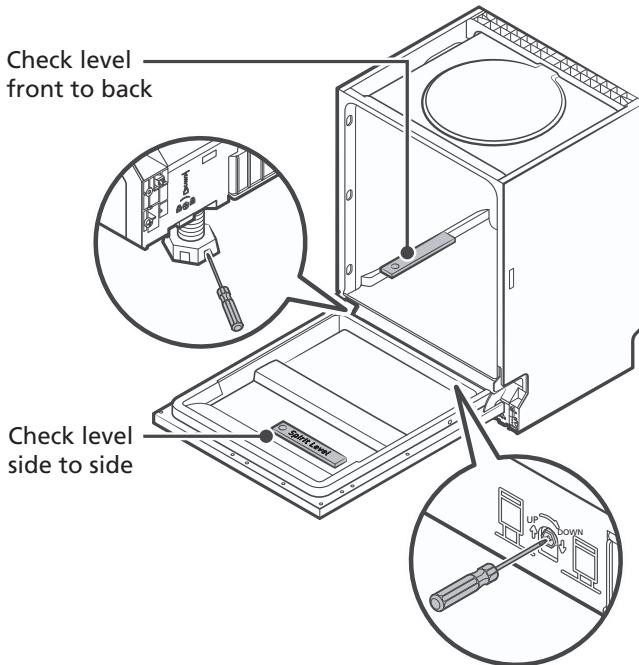

💡 NOTE:

The maximum adjustment height of the feet is 50 mm.

TROUBLESHOOTING TIPS

Before Calling For Service

Reviewing the charts on the following pages may save you from calling for service.

Problem	Possible Causes	What To Do
Dishwasher doesn't start	Fuse blown, or the circuit break tripped.	Replace fuse or reset circuit breaker. Remove any other appliances sharing the same circuit with the dishwasher.
	Power supply is not turned on.	Make sure the dishwasher is turned on and the door is closed securely. Make sure the power cord is properly plugged into the wall socket.
	Water pressure is low	Check that the water supply is connected properly and the water is turned on.
Door of dishwasher not properly closed.	Door of dishwasher not properly closed.	Make sure to close the door properly and latch it.
	Twisted or trapped drain hose.	Check the drain hose.
	Filter clogged.	Check coarse the filter.
Water not pumped from dishwasher	Kitchen sink clogged.	Check the kitchen sink to make sure it is draining well. If the problem is the kitchen sink that is not draining , you may need a plumber rather than a serviceman for dishwashers.
	Wrong detergent.	Use only the special dishwasher detergent to avoid suds. If this occurs, open the dishwasher and let suds evaporate. Add 1 gallon of cold water to the bottom of the dishwasher. Close the dishwasher door, then select any cycle. Initially, the dishwasher will drain out the water. Open the door after draining stage is complete and check if the suds have disappeared. Repeat if necessary.
Suds in the tub		


Problem	Possible Causes	What To Do
	Spilled rinse-aid.	Always wipe up rinse-aid spills immediately.
Stained tub interior	Detergent with colourant may have been used.	Make sure that the detergent has no colourant.
White film on inside surface	Hard water minerals.	To clean the interior, use a damp sponge with dishwasher detergent and wear rubber gloves. Never use any other cleaner than dishwasher detergent otherwise, it may cause foaming or suds.
There are rust stains on cutlery	The affected items are not corrosion resistant.	Avoid washing items that are not corrosion resistant in the dishwasher.
	A program was not run after dishwasher salt was added. Traces of salt have gotten into the wash cycle.	Always run a wash program without any crockery after adding salt. Do not select the Turbo function (if present), after adding dishwasher salt.
	The lid of the softer is loose.	Check the softener lid is secure.
Knocking noise in the dishwasher	A spray arm is knocking against an item in a basket	Interrupt the program and rearrange the items which are obstructing the spray arm.
Rattling noise in the dishwasher	Items of crockery are loose in the dishwasher.	Interrupt the program and rearrange the items of crockery.
Knocking noise in the water pipes	This may be caused by on-site installation or the cross-section of the piping.	This has no influence on the dishwasher function. If in doubt, contact a qualified plumber.
The dishes are not clean	The dishes were not loaded correctly.	See PART II "Preparing And Loading Dishes".
	The program was not powerful enough.	Select a more intensive program.

Problem	Possible Causes	What To Do
The dishes are not clean.	Not enough detergent was dispensed.	Use more detergent, or change your detergent.
	Items are blocking the movement of the spray arms.	Rearrange the items so that the spray can rotate freely.
	The filter combination is not clean or is not correctly fitted in the base of wash cabinet. This may cause the spray arm jets to get blocked.	Clean and/or fit the filter correctly. Clean the spray arm jets.
Cloudiness on glassware.	Combination of soft water and too much detergent.	Use less detergent if you have soft water and select a shorter cycle to wash the glassware and to get them clean.
White spots appear on dishes and glasses.	Hard water area can cause limescale deposits.	Add more detergent.
Black or grey marks on dishes	Aluminium utensils have rubbed against dishes	Use a mild abrasive cleaner to eliminate those marks.
Detergent left in dispenser	Dishes block detergent dispenser	Re-loading the dishes properly.
The dishes aren't drying	Improper loading	Load the dishwasher as suggested in the directions.
	Dishes are removed too soon	Do not empty your dishwasher immediately after washing. Open the door slightly so that the steam can come out. Take out the dishes until the inside temperature is safe to touch. Unload the lower basket first to prevent the dropping water from the upper basket.

Problem	Possible Causes	What To Do
The dishes aren't drying	Wrong program has been selected.	With a short program, the washing temperature is lower, decreasing cleaning performance. Choose a program with a long washing time.
	Use of cutlery with a low-quality coating.	Water drainage is more difficult with these items. Cutlery or dishes of this type are not suitable for washing in the dishwasher.


LOADING THE BASKETS ACCORDING TO EN50242:

1.Upper basket:

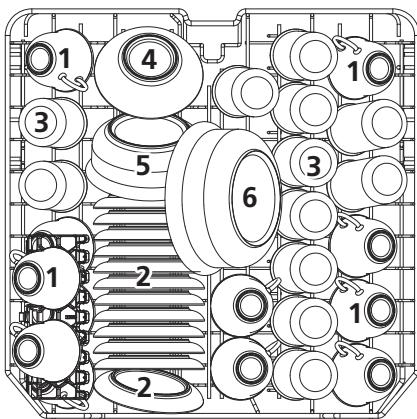

Number	Item
1	Cups
2	Saucers
3	Glasses
4	Small serving bowl
5	Medium serving bowl
6	Large serving bowl


2.Lower basket:

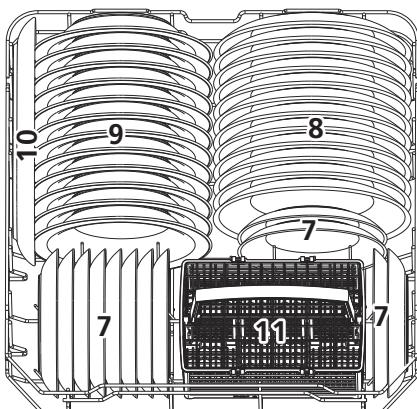

Number	Item
7	Dessert dishes
8	Dinner plates
9	Soup plates
10	Oval platter
11	Cutlery basket

3.Cutlery basket:

1	2	1		4	4	4	4	4		1	2	1
2	2	2		8			7		3	3		2
1	2	1		4	4	4	4	4		1	3	1
1	2	1		5	5	5	5	5		3	3	3
2	2	2		3			3		3	3	3	3
1	2	1		5	5	5	5	5		6		6

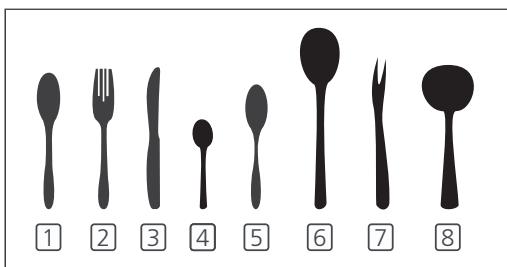

Information for comparability
tests in accordance with EN 50242

Capacity: 12 place settings


Position of the upper basket: lower position

Program: ECO

Rinse aid setting: 6

Softener setting: H3

Number	Item
1	Soup spoons
2	Forks
3	Knives
4	Teaspoons
5	Dessert spoons
6	Serving spoons
7	Serving forks
8	Gravy ladles

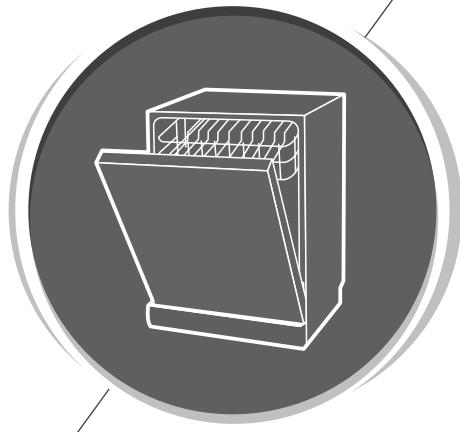

Dishwasher Instruction Manual

PART II: Special Version
D7308



Please read this manual carefully
before using the dishwasher and
Keep this manual for future reference.

|| CONTENTS


01	4	USING YOUR DISHWASHER
	4	Control Panel
	6	Water Softener
	7	Preparing And Loading Dishes
	10	Function Of The Rinse Aid And Detergent
	11	Filling The Rinse Aid Reservoir
	12	Filling The Detergent Dispenser
02	13	PROGRAMMING THE DISHWASHER
	13	Wash Cycle Table
	14	Starting A Cycle Wash
	14	Changing The Program Mid-cycle
	15	Forget To Add A Dish?
03	16	ERROR CODES
04	17	TECHNICAL INFORMATION

💡 NOTE:

- If you cannot solve the problems by yourself, please ask for help from a professional technician.
- The manufacturer, following a policy of constant development and updating of the product, may make modifications without giving prior notice.
- If lost or out-of-date, you can receive a new user manual from the manufacturer or responsible vendor.

|| QUICK USER GUIDE

Please read the corresponding content on the instruction manual for detailed operating method.

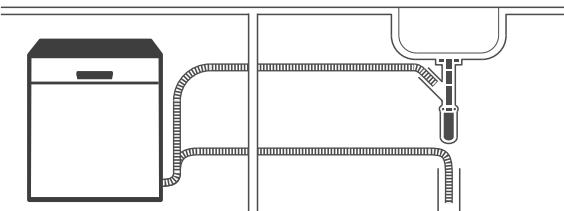


1 Install the dishwasher


(Please check the section 5 "INSTALLATION INSTRUCTION" of PART I : Generic Version.)



2 Removing the larger residue on the cutlery

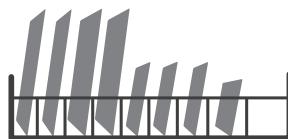

3 Loading the baskets

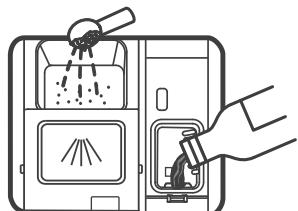


4 Filling the dispenser



5 Selecting a program and running the dishwasher

|| USING YOUR DISHWASHER

Control Panel

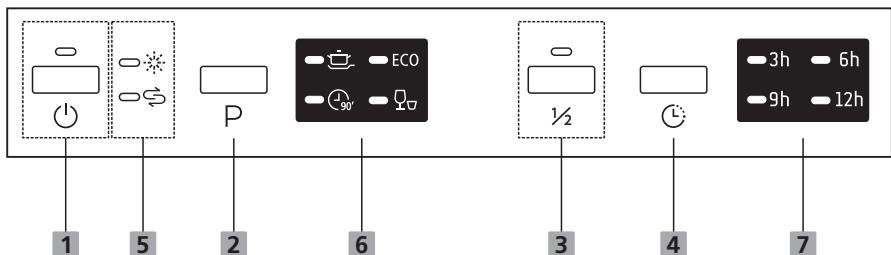

Operation (Button)

1 Power	Press this button to turn on your dishwasher, the screen lights up. When pressing this button, corresponding indicator will be lit.
2 Program	Press this button to select the appropriate washing program, corresponding indicator will be lit.
3 Half-load	When you have about or less than 6 place setting dishware to wash, you can choose this function to save energy and water. (It can only be used with Intensive, , ECO, Glass and 90 min.) When pressing this button, corresponding indicator will be lit.
4 Delay	Press the button to set the delay time.

Display

5 Warning indicator	 Rinse Aid If the “  ” indicator is lit, it means the dishwasher is low on dishwasher rinse aid and requires a refill.  Salt If the “  ” indicator is lit, it means the dishwasher is low on dishwasher salt and needs to be refilled.
----------------------------	---

6 Program indicator	 Intensive Heavily soiled items include pots and pans. With dried on food.
7 Delay time	 90 Min For normally soiled loads that need quick wash.
	 Rapid A shorter wash for lightly soiled loads that do not need drying.
	To show the delay time(3h/6h/9h/12h)

Water Softener

The water softener must be set manually, using the water hardness dial.

The water softener is designed to remove minerals and salts from the water, which would have a detrimental or adverse effect on the operation of the appliance.

The more minerals there are, the harder your water is.

The softener should be adjusted according to the hardness of the water in your area.

Your local Water Authority can advise you on the hardness of the water in your area.

Adjusting salt consumption

The dishwasher is designed to allow for adjustment in the amount of salt consumed based on the hardness of the water used. This is intended to optimise and customise the level of salt consumption.

Please follow the steps below for adjustment in salt consumption.

1. Switch on the appliance;
2. Press the Program button for more than 5 seconds to start the water softener set model within 60seconds after the appliance was switched on;
3. Press the Program button to select the proper set according to your local environment, the sets will change in the following sequence:
H1->H2->H3->H4->H5->H6;
4. Press the Power button to end the set up model.

WATER HARDNESS				Water softener level	Salt consumption (gram/cycle)
German °dH	French °fH	British °Clarke	Mmol/l		
0 - 5	0 - 9	0 - 6	0 - 0.94	H1-> Rapid Light bright	0
6 - 11	10 - 20	7 - 14	1.0 - 2.0	H2-> 90 Min Light bright	9
12 - 17	21 - 30	15 - 21	2.1 - 3.0	H3-> Rapid, 90Mins Light bright	12
18 - 22	31 - 40	22 - 28	3.1 - 4.0	H4-> ECO Light bright	20
23 - 34	41 - 60	29 - 42	4.1 - 6.0	H5-> (Rapid, ECO Light bright	30
35 - 55	61 - 98	43 - 69	6.1 - 9.8	H6-> 90 Mins, ECO Light bright	60

1°dH=1.25 °Clarke=1.78 °fH=0.178mmol/l

The manufactory setting: H3

Contact your local water board for information on the hardness of your water supply.



Please check the section 3 "Loading The Salt Into The Softener" of PART I : Generic Version, If your dishwasher lacks salt.

💡 NOTE:

If your model does not have any water softener, you may skip this section.

Water Softener

The hardness of the water varies from place to place. If hard water is used in the dishwasher, deposits will form on the dishes and utensils.

The appliance is equipped with a special softener that uses a salt container specifically designed to eliminate lime and minerals from the water.

Preparing And Loading Dishes

- Consider buying utensils which are identified as dishwasher-proof.
- For particular items, select a program with the lowest possible temperature.
- To prevent damage, do not take glass and cutlery out of the dishwasher immediately after the program has ended.

For washing the following cutlery/dishes

Are not suitable

- Cutlery with wooden, horn china or mother-of-pearl handles
- Plastic items that are not heat resistant
- Older cutlery with glued parts that are not temperature resistant
- Bonded cutlery items or dishes
- Pewter or cooper items
- Crystal glass
- Steel items subject to rusting
- Wooden platters
- Items made from synthetic fibres

Are of limited suitability

- Some types of glasses can become dull after a large number of washes
- Silver and aluminum parts have a tendency to discolour during washing
- Glazed patterns may fade if machine washed frequently

Recommendations for loading the dishwasher

Scrape off any large amounts of leftover food. Soften remnants of burnt food in pans. It is not necessary to rinse the dishes under running water.

For best performance of the dishwasher, follow these loading guidelines.

(Features and appearance of baskets and cutlery baskets may vary from your model.)

Place objects in the dishwasher in following way:

- Items such as cups, glasses, pots/pans, etc. are faced downwards.
- Curved items, or ones with recesses, should be loaded aslant so that water can run off.
- All utensils are stacked securely and can not tip over.
- All utensils are placed in the way that the spray arms can rotate freely during washing.
- Load hollow items such as cups, glasses, pans etc. With the opening facing downwards so that water cannot collect in the container or a deep base.
- Dishes and items of cutlery must not lie inside one another, or cover each other.
- To avoid damage, glasses should not touch one another.
- The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups.
- Long bladed knives stored in an upright position are a potential hazard!
- Long and / or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket.
- Please do not overload your dishwasher. This is important for good results and for reasonable consumption of energy.

NOTE:

Very small items should not be washed in the dishwasher as they could easily fall out of the basket.

Removing the dishes

To prevent water dripping from the upper basket into the lower basket, we recommend that you empty the lower basket first, followed by the upper basket.

WARNING



Items will be hot! To prevent damage, do not take glass and cutlery out of the dishwasher for around 15 minutes after the program has ended.


Loading the upper basket

The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty). Position the dishes and cookware so that they will not get moved by the spray of water.



Loading the lower basket

We suggest that you place large items and the most difficult to clean items are to be placed into the lower basket: such as pots, pans, lids, serving dishes and bowls, as shown in the figure below. It is preferable to place serving dishes and lids on the side of the racks in order to avoid blocking the rotation of the top spray arm.

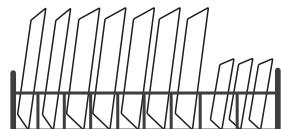

The maximum diameter advised for plates in front of the detergent dispenser is of 19 cm, this not to hamper the opening of it.

Loading the cutlery basket

Cutlery should be placed in the cutlery rack separately from each other in the appropriate positions, and do make sure the utensils do not nest together, this may cause bad performance.

⚠ WARNING



Do not let any item extend through the bottom.
Always load sharp utensils with the sharp point down!



For the best washing effect, please load the baskets refer to standard loading options on last section of PART I : Generic Version

Function Of The Rinse Aid And Detergent

The rinse aid is released during the final rinse to prevent water from forming droplets on your dishes, which can leave spots and streaks. It also improves drying by allowing water to roll off the dishes. Your dishwasher is designed to use liquid rinse aids.

⚠ WARNING

Only use branded rinse aid for dishwasher. Never fill the rinse aid dispenser with any other substances (e.g. Dishwasher cleaning agent, liquid detergent). This would damage the appliance.

When to refill the rinse aid

The regularity of the dispenser needing to be refilled depends on how often dishes are washed and the rinse aid setting used.

- The Low Rinse Aid indicator () will appear in the display when more rinse aid is needed.
- Do not overfill the rinse aid dispenser.

Function of detergent

The chemical ingredients that compose the detergent are necessary to remove, crush and dispense all dirt out of the dishwasher. Most of the commercial quality detergents are suitable for this purpose.

⚠ WARNING

- Proper Use of Detergent


Use only detergent specifically made for dishwashers use. Keep your detergent fresh and dry.

Don't put powdered detergent into the dispenser until you are ready to wash dishes.




Dishwasher detergent is corrosive! Keep dishwasher detergent out of the reach of children.


• Filling The Rinse Aid Reservoir

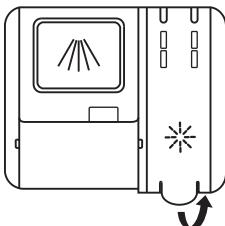

- 1 Remove the rinse reservoir cap by lifting up the handle .

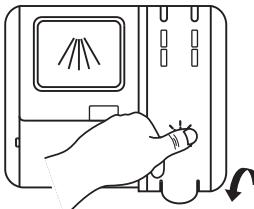

- 3 Close the cap after all.

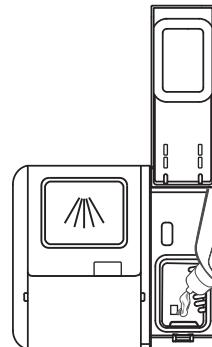

- 2 Pour the rinse aid into the dispenser, being careful not to overfill.



Adjusting the rinse aid reservoir

To achieve a better drying performance with limited rinse aid, the dishwasher is designed to adjust the consumption by user. Follow the below steps.

1. Power on the dishwasher by plugging in;
2. Within 60 seconds after step 1, press the Program button more than 5 seconds, and then press the Delay Button to enter the set model, the rinse aid indication blinks as 1Hz frequency.
3. Press the Program button to select the proper set according to your using habits , the sets will change in the following sequence: D1->D2->D3->D4->D5->D1, The higher the number, the more rinse aid the dishwasher uses.
4. Without operation in 5 seconds or press the power button to exit the set model, the set success.

Rinse aid level	Selector position
D1	Rapid Light bright
D2	90 mins Light bright
D3	Rapid, 90 mins Light bright
D4	ECO Light bright
D5	Rapid, ECO Light bright


• Filling The Detergent Dispenser

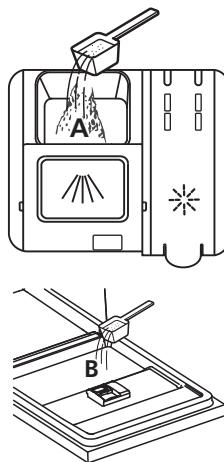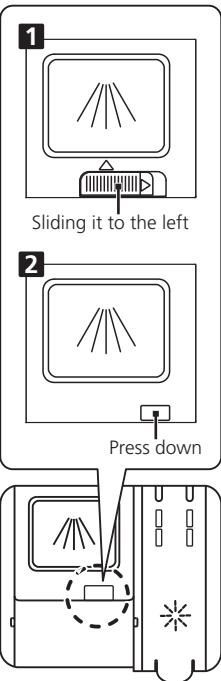

2 Add detergent into the larger cavity (A) for the main wash cycle . For better cleaning result, especially if you have very dirt items, pour a small amount of detergent onto the door. The additional detergent will activate during the pre-wash phase.

1 Please choose an open way according to the actual situation.

1. Open the cap by sliding the release catch.
2. Open the cap by pressing down the release catch.

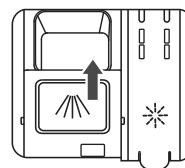

3 Close the flap by sliding it to the front and then pressing it down.

💡 NOTE:

- Be aware that depending on the soiling of water, setting may be different.
- Please observe the manufacturer's recommendations on the detergent packaging.

PROGRAMMING THE DISHWASHER

Wash Cycle Table

The table below shows which programmes are best for the levels of food residue on them and how much detergent is needed. It also show various information about the programmes.

(●)Means: need to fill rinse into the Rinse-Aid Dispenser.

Program	Description Of Cycle	Detergent Pre/Main	Running Time(min)	Energy (kWh)	Water (L)	Rinse Aid
 Intensive	Prewash(50°C) Wash(60°C) Rinse Rinse Rinse(70°C) Drying	<u>5/25g</u> (1 or 2pieces)	170	1.6	18.5	●
 ECO (*EN 50242)	Prewash Wash(45 °C) Rinse(65°C) Drying	<u>5/25g</u> (1 or 2pieces)	195	0.90	11	●
 90 Min	Wash(65°C) Rinse Rinse(65°C) Drying	<u>30g</u> (1 piece)	90	1.35	12.5	●
 Rapid	Wash(45 °C) Rinse(50 °C) Rinse(55 °C)	25g	30	0.75	11	○

NOTE:

EN 50242: This program is the test cycle. The information for comparability test in accordance with EN 50242.

NOTE:

EN 50242: This program is the test cycle. The information for comparability test in accordance with EN 50242.


Starting A Cycle Wash

1. Draw out the lower and upper basket, load the dishes and push them back.
It is commended to load the lower basket first, then the upper one.
2. Pour in the detergent.
3. Insert the plug into the socket. The power supply refer to last page "Product fiche".
Make sure that the water supply is turned on to full pressure.
4. Open the door, touch the Power button, and the On/Off light will turn on.
5. Choose a program, the response light will turn on. Then close the door, the dishwasher will start its cycle.

Changing The Program Mid-cycle

A wash cycle can only be changed if it has been running for a short time otherwise, the detergent may have already been released and the dishwasher may have already drained the wash water. If this is the case, the dishwasher needs to be reset and the detergent dispenser must be refilled. To reset the dishwasher, follow the instructions below:


1. Open the door a little to stop the dishwasher, after the spray arm stop working, you can open the door completely.
2. Press Program button more than three seconds the machine will be in stand by state.
3. You can change the program to the desired cycle setting.

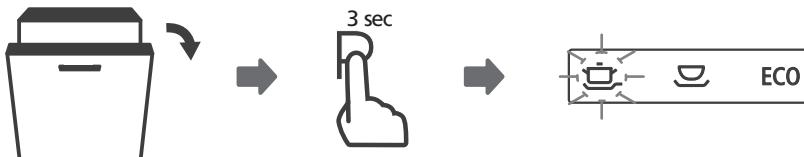

Forget To Add A Dish?

A forgotten dish can be added any time before the detergent dispenser opens. If this is the case, follow the instructions below:

1. Open the door a little to stop the washing.
2. After the spray arms stop working, you can open the door completely.
3. Add the forgotten dishes.
4. Close the door.
5. The dishwasher will start running again.

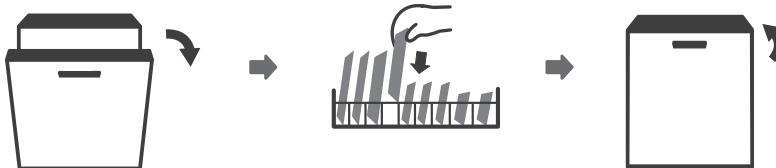

⚠️ WARNING



It is dangerous to open the door mid-cycle, as hot steam may scald you.

|| ERROR CODES


If there is a malfunction, the dishwasher will display error codes to identify these:

Codes	Meanings	Possible Causes
The Rapid light flicker fleetly	Longer inlet time.	Faucets is not opened, or water intake is restricted,or water pressure is too low.
The Rapid light and 90mins light flicker fleetly	Not reaching required temperature.	Malfunction of heating element .
The ECO light flicker fleetly	Overflow.	Some element of dishwasher leaks .

⚠ WARNING

- If overflow occurs, turn off the main water supply before calling a service.
- If there is water in the base pan because of an overfill or small leak, the water should be removed before restarting the dishwasher.

|| TECHNICAL INFORMATION

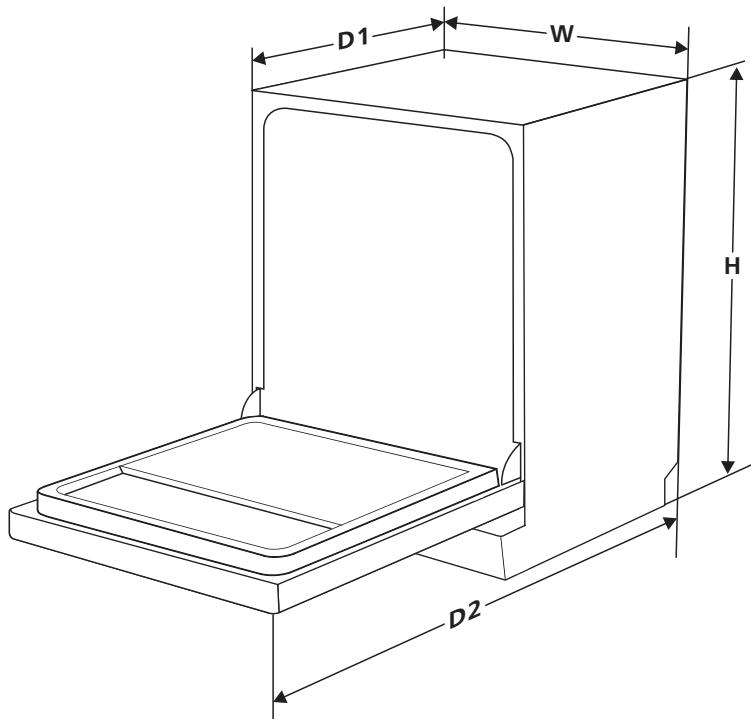

Height (H)	815mm
Width (W)	598mm
Depth (D1)	550mm (with the door closed)
Depth (D2)	1150mm (with the door opened 90°)

Product fiche

Sheet of household dishwasher according to EU Directive 1016/2010 & 1059/2010:

Manufacturer	kupper
Type / Description	D7308
Standard place settings	12
Energy efficiency class 1	A++
Annual energy consumption 2	258 kWh
Energy consumption of the standard cleaning cycle	0.90 kWh
Power consumption of off-mode	0.45 W
Power consumption of left-on mode	0.49W
Annual water consumption 3	3080 liter
Drying efficiency class 4	A
Standard cleaning cycle 5	ECO 45°C
Program duration of the standard cleaning cycle	195 min
Noise level	49 dB(A) re 1 pW
Mounting	Built-in
Could be built-in	YES
Power consumption	1760-2100W
Rated voltage / frequency	220-240V/50Hz
Water pressure (flow pressure)	0.04-1.0MPa=0.4-10 bar

NOTE:

- 1** A ++ (highest efficiency) to D (lowest efficiency)
- 2** Energy consumption based on 280 standard cleaning cycles using cold water fill and the consumption of the low power modes. Actual energy consumption will depend on how the appliance is used.
- 3** Water consumption based on 280 standard cleaning cycles. Actual water consumption will depend on how the appliance is used.
- 4** A (highest efficiency) to G (lowest efficiency)
- 5** This program is suitable for cleaning soiled normally soiled tableware and that it is the most efficient programme in terms of its combined energy and water consumption for that type of tableware.